



## BASIC START **GUIDE**



[WWW.TRIGGERCAM.CO](http://WWW.TRIGGERCAM.CO)

# TRIGGERCAM BASIC START GUIDE

## STEP 1:

Select & fit the required insert over your riflescope eyepiece. There should be a gap of approximately 2mm.



## STEP 2:

Slide the correct insert into the **TRIGGERCAM** so that the insert slot is aligned with the slot of the **TRIGGERCAM**.



 
 
## STEP 3:

Mount the **TRIGGERCAM** over the riflescope eyepiece and slightly tighten the mounting screw until the **TRIGGERCAM** is fixed to your riflescope.



**STEP 4:**

Switch on the **TRIGGERCAM**. Press and hold the power button for 2 seconds. Power button (red arrow) Wi-Fi button (blue arrow). To switch on the Wi-Fi. Press and hold the Wi-Fi button for 2 seconds.

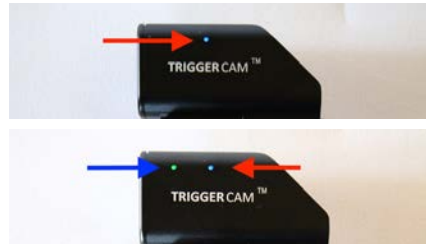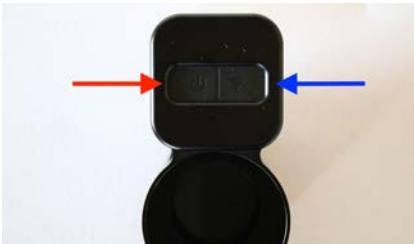**STEP 5:**

Connect to the **TRIGGERCAM** Wi-Fi network on your mobile device. The password for the camera is 12345678.

 
**STEP 6:**

Search for **TRIGGERCAM** on Google play or the App store and download the app for your mobile device. Connect to your camera through the mobile app.



**STEP 7:**

Remove the focus cap with the **TRIGGERCAM** tool.

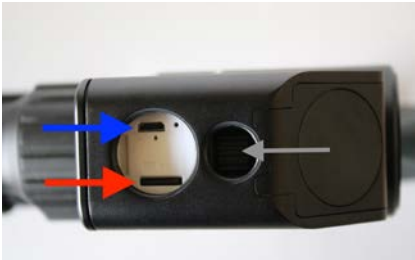**STEP 8:** (continue)

Grey arrow - Focus Ring  
Blue arrow - Charge Port  
Red arrow - SD Card

**STEP 8:**

After mounting, the next step is to focus the **TRIGGERCAM** for your specific riflescope. Ensure your riflescope is set on the desired magnification preferred, and aim on a target at the distance on which your rifle is zeroed e.g. 100 metres. Through using the live streaming function on the app turn the focus until the image is clear.

[TIP: Focus your **TRIGGERCAM** on a high magnification, if you then move to lower magnification it will remain in focus. If you focus on a low magnification and want to move higher, it will lose focus faster.]

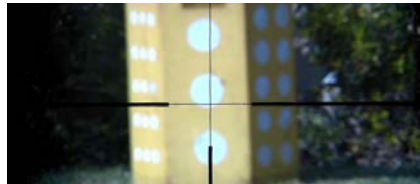 


Image not in focus



Image in focus

**STEP 9:**

Once your device is focussed, set the orientation of the camera so that the crosshairs are perfectly aligned. This can be done through live streaming function on your smart phone (SEE INSTRUCTIONS OF STREAMING BELOW).

**STEP 10:**

Your **TRIGGERCAM** is now ready!!!

**IMPORTANT INFORMATION**

- Recording can be done on either the **TRIGGERCAM** itself or via the **TRIGGERCAM** smart phone app. After the **TRIGGERCAM** is switched on, push the ON button until the beep sound is heard, the **TRIGGERCAM** is now recording. This recording is saved on the SD card that is inserted in the **TRIGGERCAM**. To stop the recording, push the ON button again until the beep sound is heard.



- The red light indicates that your **TRIGGERCAM** is charging when plugged in. When the red light changes to green, your unit is fully charged.



- The moment your **TRIGGERCAM** is switched on the blue light will show. When pressing the ON button again the **TRIGGERCAM** starts recording (green light) on the SD card in the unit. By pressing the ON button again, recording is stopped, and the GREEN light will disappear.



 
- Battery life of your Triggercam: 2 hours recording time. Tip: to get longer battery operational time switch your triggercam on & off between hunting sessions or connect a portable power bank to your unit.

## QUICK FACTS

### THE APP PROVIDES USERS WITH THE FOLLOWING INTERACTIVE FUNCTIONS:



Livestream TRIGGERCAM  
to your mobile device

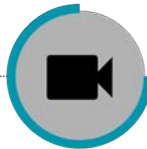

 
Control the recording of your  
TRIGGERCAM from your device



Record, save & view videos  
directly from your device



Access the gallery of all  
your video/photo content  
on your mobile device

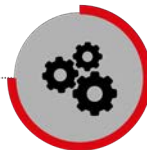

Manage all the settings of  
your TRIGGERCAM



Share your video/photo  
content on Social media  
platforms & with friends

TRIGGERCAM	FUNCTIONS
Power/ Shutter button	1. Turn the TRIGGERCAM on or off 2. Start and stop the on-board video recording
Wi-Fi button	Switch the Wi-Fi on and off
Blue LED indicator	TRIGGERCAM on
Blue LED flashing	Wi-Fi on
RED LED flashing	Battery low
Green LED indicator	Triggercam recording
Micro SD card slot	Micro SD card storage location.
USB Port	1. Connect to computer for data transfer 2. Charge your TRIGGERCAM
Reset Button	Reset the TRIGGERCAM

**DISCLAIMER**

TRIGGERCAM trading under, EYECAM TECHNOLOGIES (PTY) LTD 2014/010477/07, and their shareholders, directors, officers, employees, sub-contractors or agents or affiliates in whole or in part, shall not be liable in any way whatsoever for any loss, injury or damage (including but not limited to consequential or special damages or loss of profits) of whatsoever nature, and whether or not caused by the negligence (gross or otherwise) of EYECAM TECHNOLOGIES (PTY) LTD and their shareholders, directors, officers, employees, sub-contractors or agents arising out of, incidental to, or in connection in any way with the use or instalment of our products. EYECAM TECHNOLOGIES (PTY) LTD and their shareholders, directors, officers, employees, sub-contractors or agents are hereby released from any duty of care towards such customer, client or person. EYECAM TECHNOLOGIES (PTY) LTD shall have no liability of any nature whatsoever to any customer, client or person to whom purchase a product or from us. The waiver referred to above will be binding on the heirs, dependants, assignees, executors, trustees or other legal representatives of the customer, client or person who are using, installing, testing or purchasing our products.

